

WARNING!

PLEASE READ BEFORE BEGINNING INSTALLATION

NOTE: Do not attach the handheld shower to the wall unless you have an extension hose with a barrel protection. This may cause water to leak behind your walk-in tub.




Water from the hose can drip down into the hand shower base and get behind your tub without the barrel protection.



1) Start by unscrewing your shower head mixer from the hose.



2) Next take your stainless steel barrel and screw it on the end of the hose.

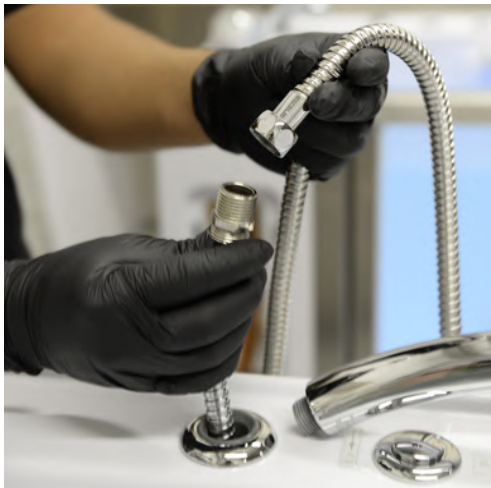

3) Take your extension hose and screw the end to the opposite side of the barrel.



4) Place the barrel in the shower base to plug the hole.



5) Finally, screw on the shower head mixer to the other end of the extension hose.