

ELLA BARRIER FREE
SHOWER BASE
INSTALLATION INSTRUCTIONS




ADA Size: 33.5" X 61.5"
37.5" X 61.5"

Note: read instructions completely before proceeding with installation.

The opening dimensions should be at least 1/8" (3mm) larger than dimensions shown.

For the best fit, the opening measurements should be verified against the actual shower base received.

Tools and Materials

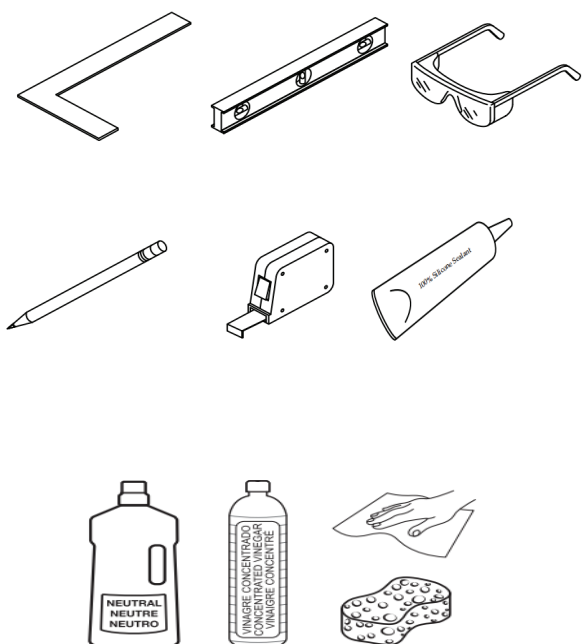

⚠ WARNING ⚠

Do not proceed if you have any questions or concerns about performing any steps in this manual. If necessary, hire or consult a certified plumber or licensed general contractor for installation.

⚠ CAUTION ⚠

Carefully open the box to prevent any damage to the surface of the base.


🧴 CARE AND MAINTENANCE 🧴

Simply wipe the surface with a damp towel to remove watermarks and stains. For basic stains, clean with mild detergent or a general-purpose cleaner. For corners and seams, use a mildew cleaner.



🛡 WARRANTY

One (1) Year

Shower Bases and Accessories

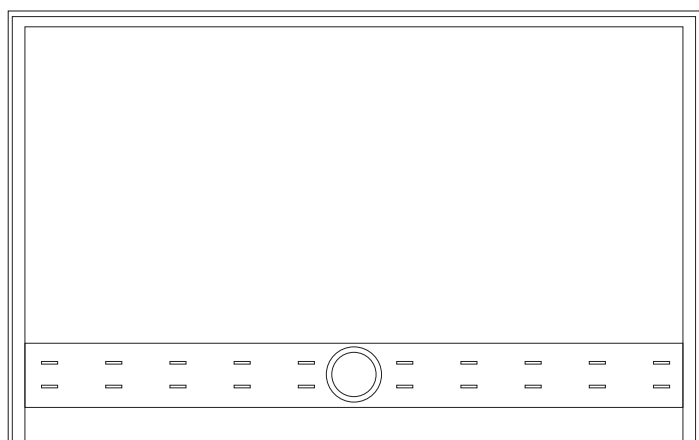


ADA Shower Base

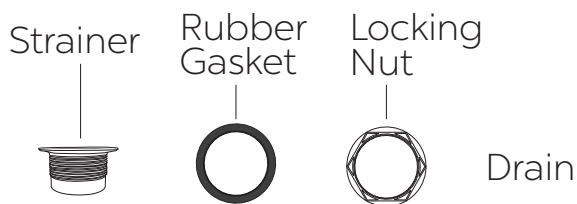

Stainless Steel Drain Cover




End Cap Covers

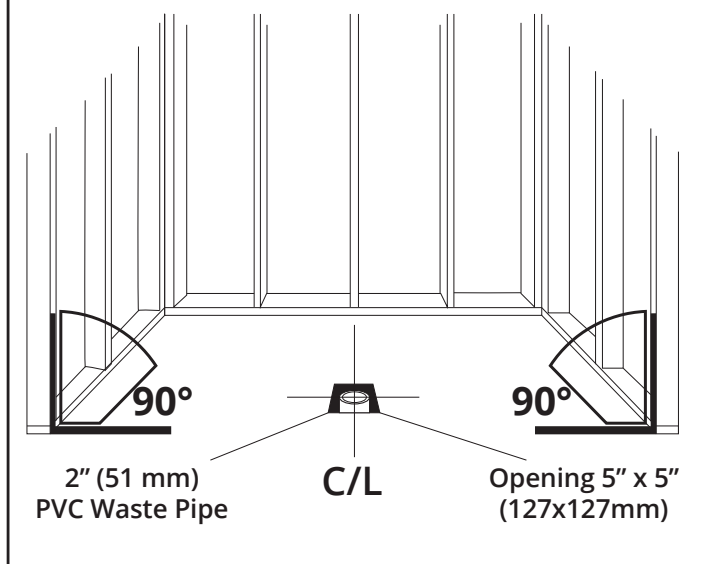FIGURE A

1. Prepare the Installation Area


Ensure that the floor and stud walls are square and plumb on a level surface, as shown in Figure A. Provide a 5" x 5" (127 x 127 mm) opening in the floor for the drain. Refer to the product rough-in specifications for the exact drain location.

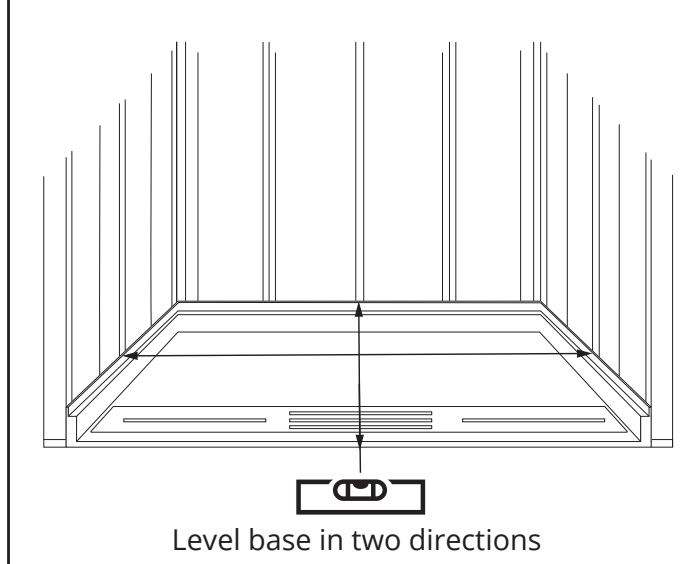FIGURE C

3. Position the Shower Base

Place the shower base into position, ensuring that the drain assembly slides over the waste pipe. Make sure the front edge of the shower base is in full contact with the rough floor along its entire length.


Verify that the base is level in both directions, as shown in Figure C.

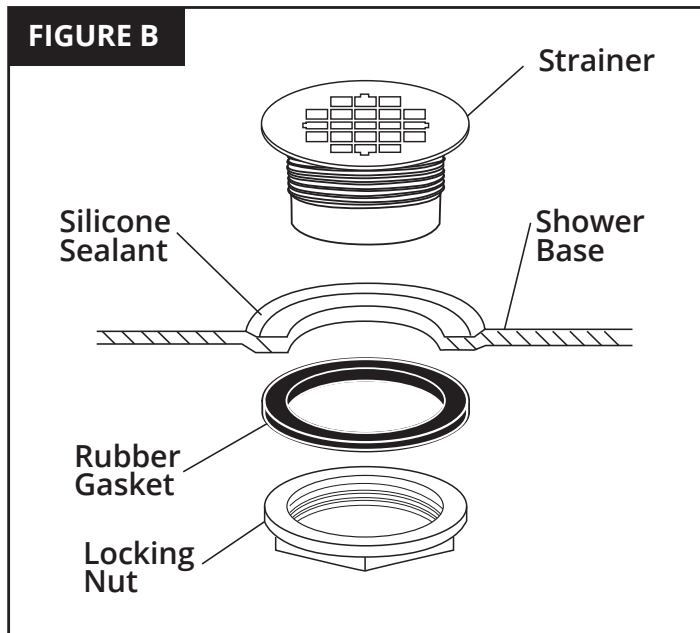FIGURE B

2. Install the Drain Assembly

Before installing the drain into the shower base, remove the strainer (Figure B). The strainer will be installed after the shower base is in its final position.

Cut the waste pipe to the appropriate height so that the drain body fits snugly into the shower base without gaps. Ensure a secure fit before proceeding. Apply a continuous bead of silicone sealant between the drain body and the shower base to create a watertight seal.



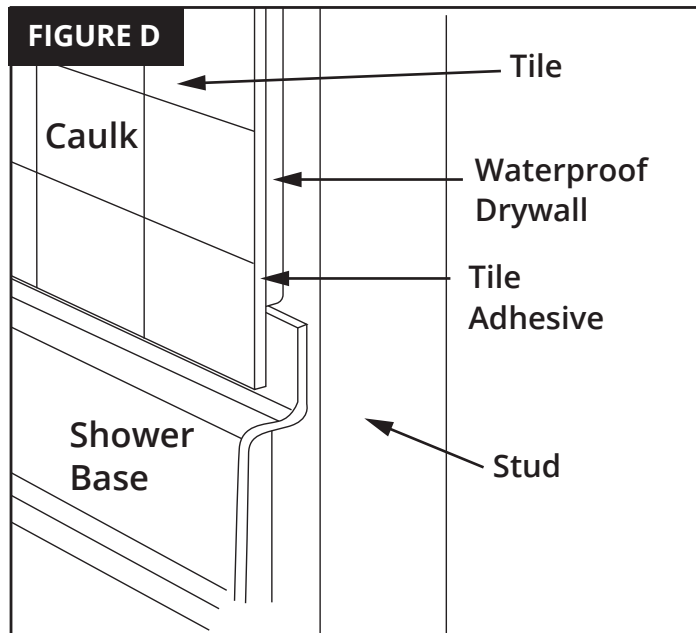
FIGURE D

4. Protect and Complete the Installation

Cover the strainer with tape to protect its finish and to prevent construction debris from entering the drain. Complete the final installation steps as illustrated in Figure D.

Stainless Steel Drain Cover Install

ELLA BARRIER FREE
SHOWER BASE
INSTALLATION INSTRUCTIONS

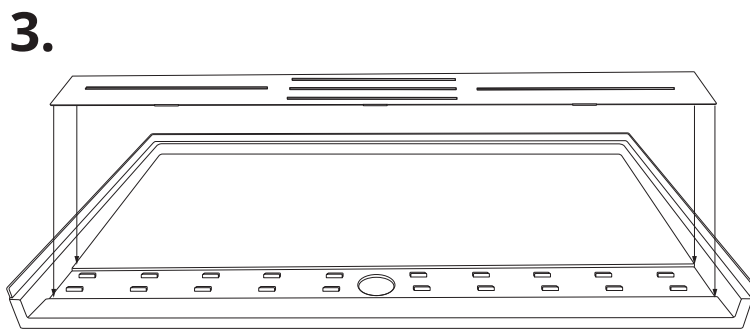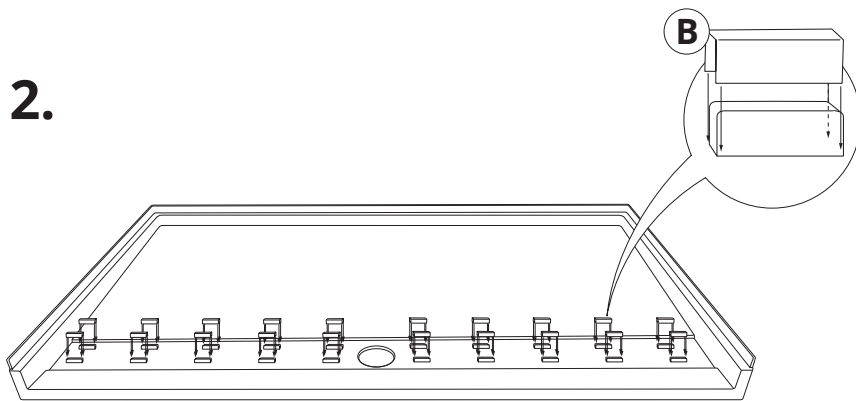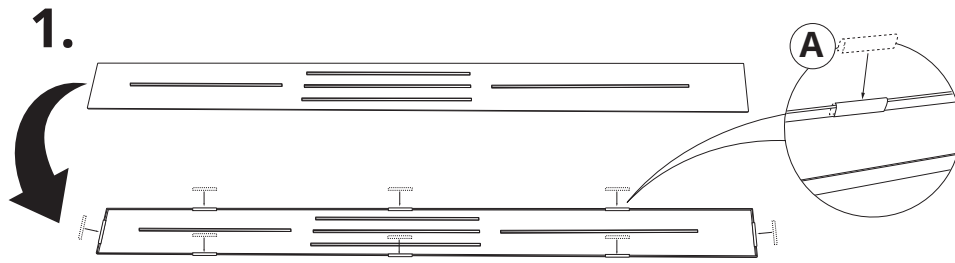

⚠ IMPORTANT ⚠

Allow the shower base to
cure for 24 hours
before working in the area.

Discover more products and
additional information at

www.ellasbubbles.com

Toll Free: 800-480-6850

Office Direct: 312-666-3552