


1. Entering the walk-in bathtub:

- The U-shape inward swing door handle is located on the front of the tub, and is designed for a safer entry with an added deck and low step-in threshold.
- Once you are in the tub, remain standing and close the door. While the door may be closed from a sitting position, it is much more difficult.
- Do not open the door unless the tub is completely drained!



Front Entry Model
Shown Above

Air and Hydro Therapy Massage Option with Ella 2
Piece Fast-Fill Faucet

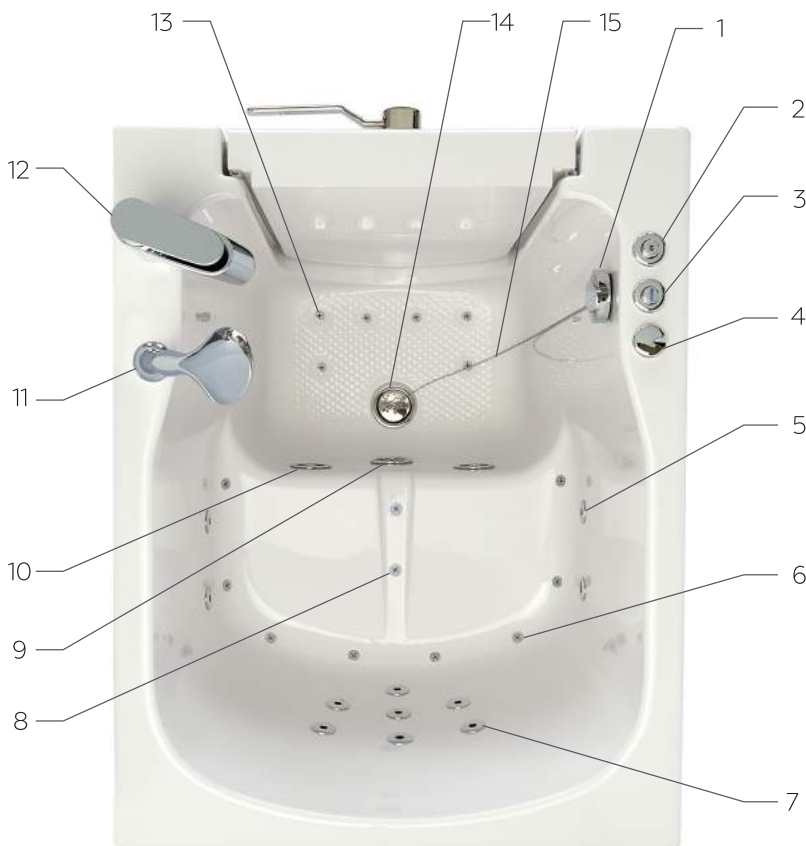

- 1 Drain Opener
- 2 Air Jets On/Off
- 3 Microbubbles On/Off (Optional)
- 4 Dial Control
- 5 Hip & Thigh Hydro Massage jets
- 6 Upper Air Massage Jets
- 7 Back Hydro Massage Jets
- 8 Bidet Air Massage Jets
- 9 Hydro Inlet
- 10 2 Calf & Leg Hydro jets
- 11 Pull-Out Justable Hand Mixer
- 12 Fast Fill Faucet
- 13 Lower Air Massage Jets
- 14 2" Single Drain
- 15 Safety Chain Puller

2. Filling and Draining the Tub:

- Open the drain by turning handle clockwise, and close the drain by turning counter-clockwise.
- To avoid spills or leaks, do not fill the tub over the center of the drain handle.
- Do not open the door unless the tub is completely drained!



3 . Ella's 2 Piece Fast-Fill Faucet:

- To turn the water on, lift the lever. The temperature can be adjusted by turning the lever to the left for hot water, and to the right for cold water.
- To switch between the faucet and hand-shower, push the diverter button located under the spout.
- To turn the faucet off, push the lever down.

NOTE: The hand-shower has 5 water flow settings controlled by a dial.



4. Push Controls



ON/OFF BUTTON	Hydro Massage	Water
ON/OFF BUTTON	Air Massage	Air
ON/OFF BUTTON	Infusion Microbubble Therapy	Micro
Hydro Intensity Control Dial		

5. Hydrotherapy System

Push Control Option:

- Push ON/OFF control labeled "Water" to turn the hydro pump on. To turn it off, press again.

Adjusting the Water Massage Intensity:

- Turn the intensity dial control clockwise or counter-clockwise to adjust the water pressure to your liking.

In-Line Water Heater:

- The in-line water heater will automatically turn on/off when the hydro pump is turned on/off. The purpose of the in-line waterheater is to maintain the temperature of the water.

Ozone Sterilization:

- The ozone sterilization will automatically turn on/off as soon as hydro pump is turned on/off.



Hydro Jets Shown

6. Air Therapy System

Auto-Purge Maintenance System:

- Air Massage is equipped with an auto-purge feature that automatically turns on 20 minutes after the pump has been turned on. It runs for 120 seconds to ensure your system is clear and free of excess water, moisture or mildew.

WARNING: Do not be alarmed if system turns on while you are bathing! It will run for 120 seconds before turning off. No need to leave the tub if this happens.

Push Control Option:

- Push ON/OFF push control button labeled "Air" to turn the air pump on. To adjust the speed, continue to press the button (one press for low, two presses for medium, and three presses for high speed). To turn it off, push the button four times.



Auto-Purge Shown Above