

# Ella Prairie Bone Cultured Marble 8 Panel Shower Wall Surround Package - 1

Package - 1 Content: 8 Shower Panels

Material: Cultured Marble

Color / Finish: Bone Matte

Pattern: Prairie

Wall Surround Size: 36"Wx60"Lx90"H Panel Thickness:  
1/4"

Net Weight: 177 lb.

Shipping Crate Size: 40"W x64"L x12"H



Shipping Weight: 202 lb.

Available Package Options:

Package-2: 8 wall panels & 3 shelves

Package-3: 8 wall panels, 3 shelves & 2" trims

Cultured marble panels and trims can be cut to size. The shelves or panels can be arranged in any layout. See installation manual for directions.

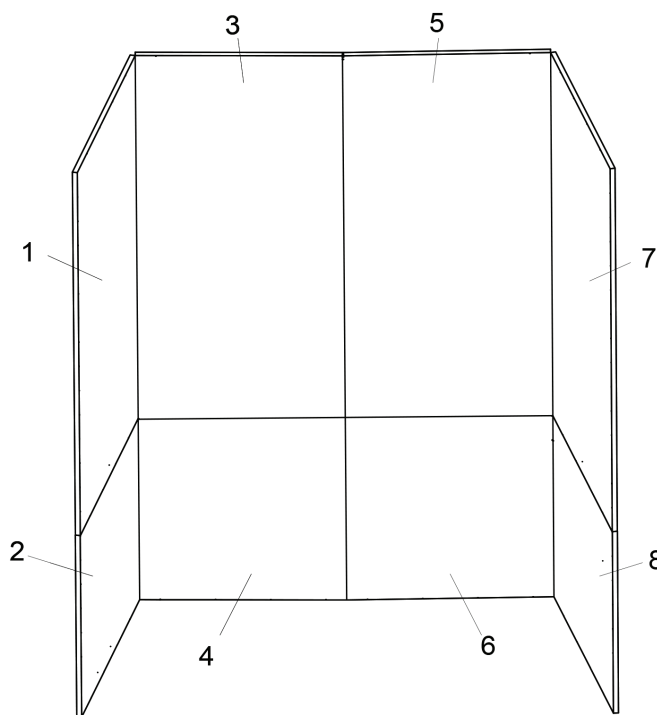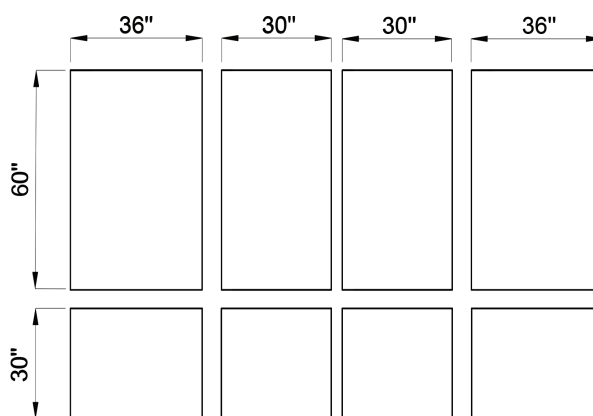

# Ella Prairie Bone Cultured Marble 8 Panel Shower Wall Surround Package - 2



Package - 2 Content: 8 Shower Panels & 3 Shelves

Material: Cultured Marble  
Color / Finish: Bone Matte  
Pattern: Prairie  
Wall Surround Size: 36"Wx60"Lx90"H  
Panel Thickness: 1/4"  
Net Weight: 185 lb.



Shipping Crate Size: 40"W x64"L x12"H  
Shipping Weight: 210 lb.

Available Package Options:  
Package-1: 8 wall panels  
Package-3: 8 wall panels, 3 shelves & 2" trims

Cultured marble panels and trims can be cut to size. The shelves or panels can be arranged in any layout. See installation manual for directions.

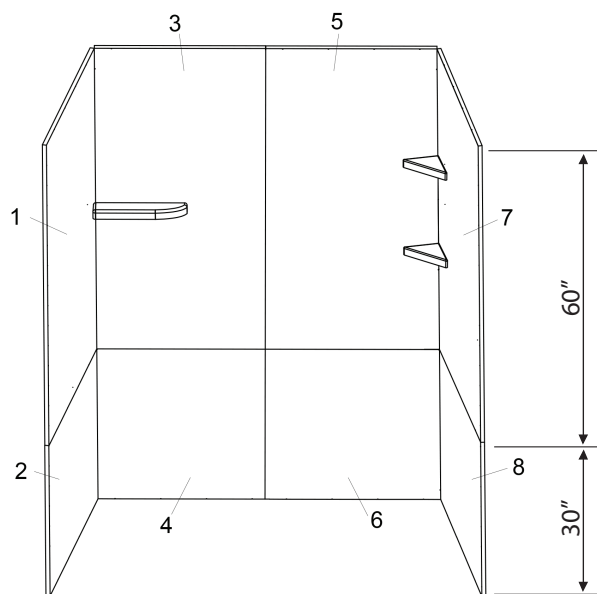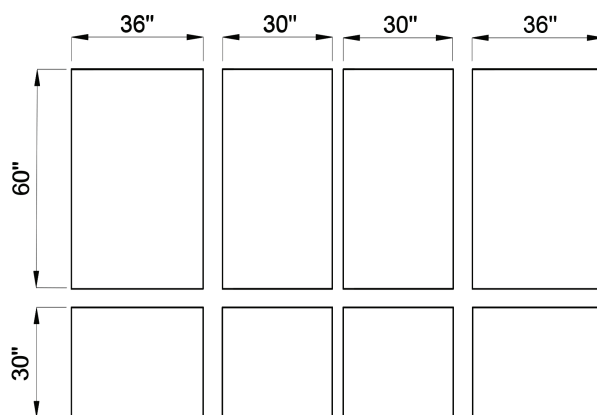

2x7" Corner Shelves

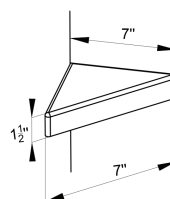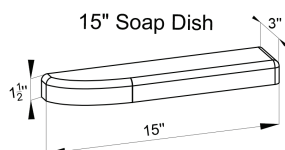

# Ella Prairie Bone Cultured Marble 8 Panel Shower Wall Surround Package - 3

Package - 3 Content: 8 Wall Panels, 3 Shelves & 2" Trims  
(three (3) 30"x 2"x ¾", three (3) 60"x 2"x ¾")

Material: Cultured Marble

Color / Finish: Bone Matte

Pattern: Prairie

Wall Surround Size: 36"Wx60"Lx90"H

Panel Thickness: ¼"

Net Weight: 207 lb.



Shipping Crate Size: 40"W x64"L x12"H  
Shipping Weight: 232 lb.


Available Package Options:

Package-1: 8 wall panels


Package-2: 8 wall panels & 3 shelves

Cultured marble panels and trims can be cut to size. The shelves or panels can arranged in any layout. See installation manual for directions.

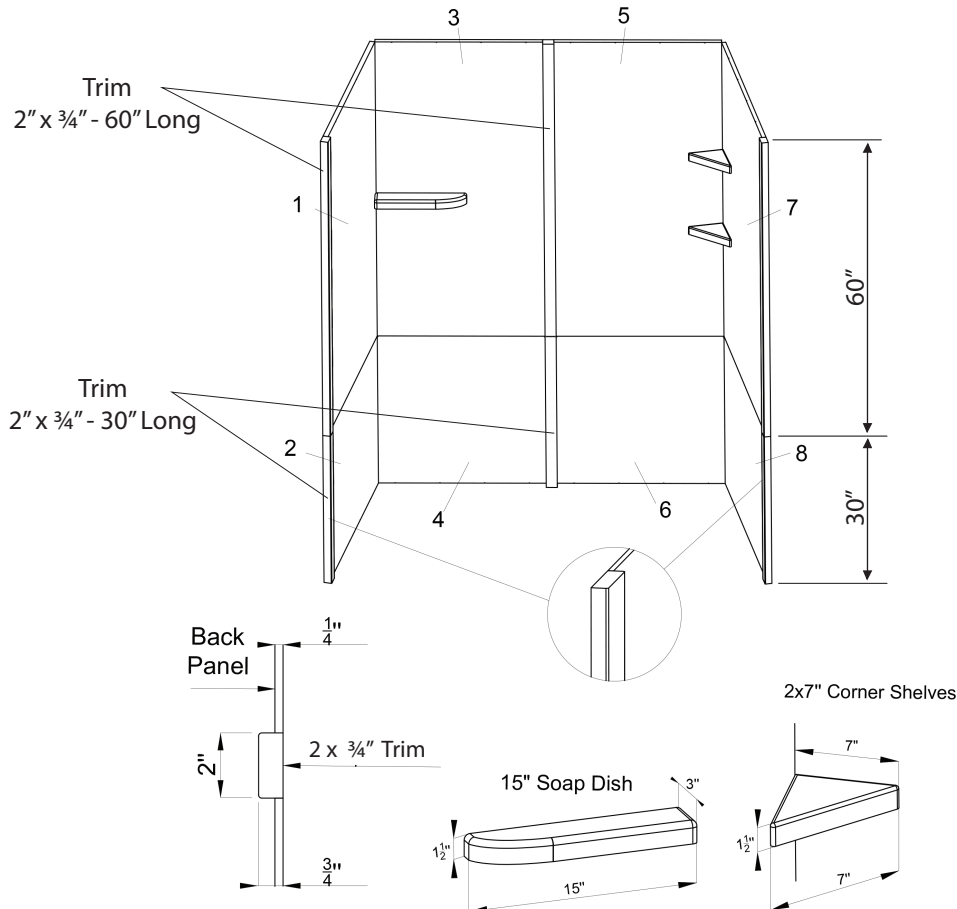
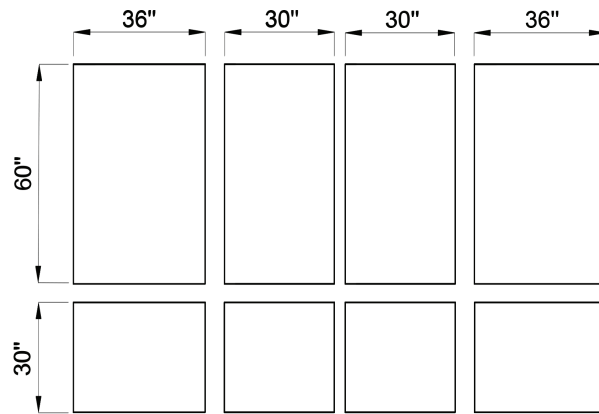


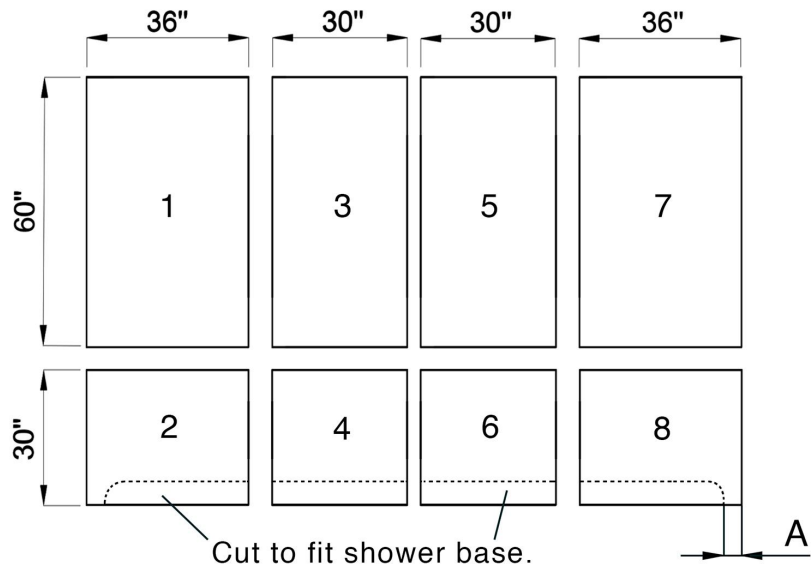


Use caulking  
and paint to  
finish if trim is  
not selected.

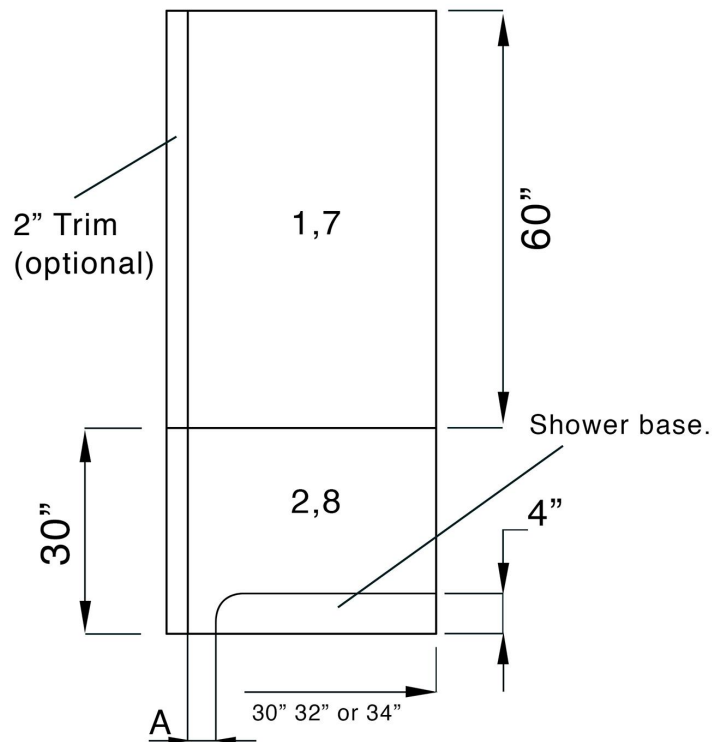

Side view of shower wall and base.

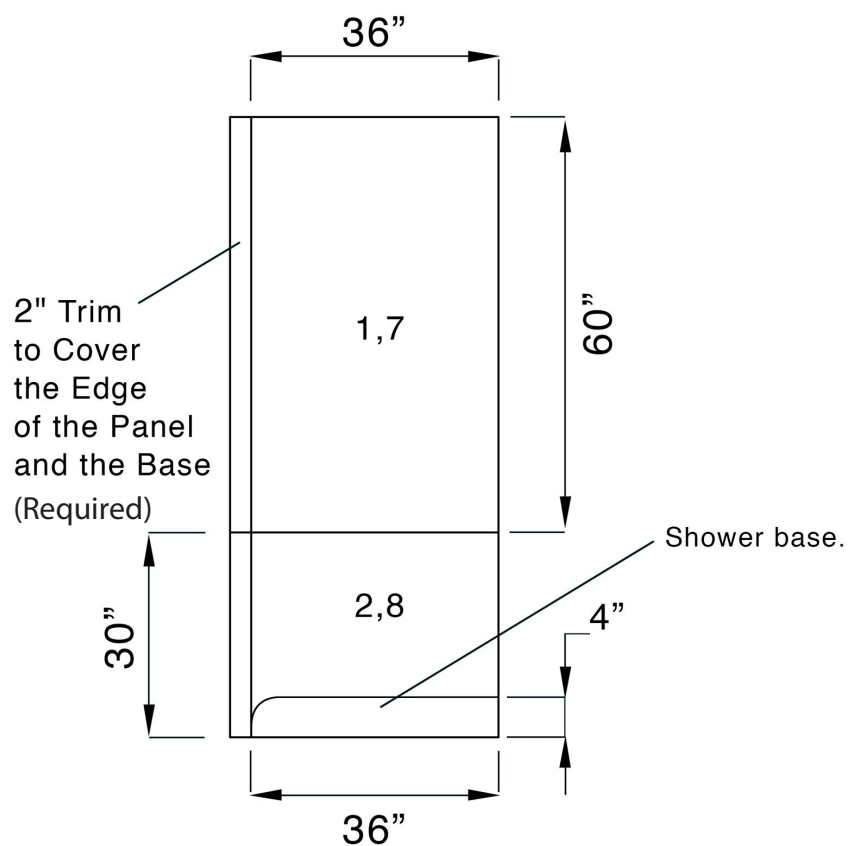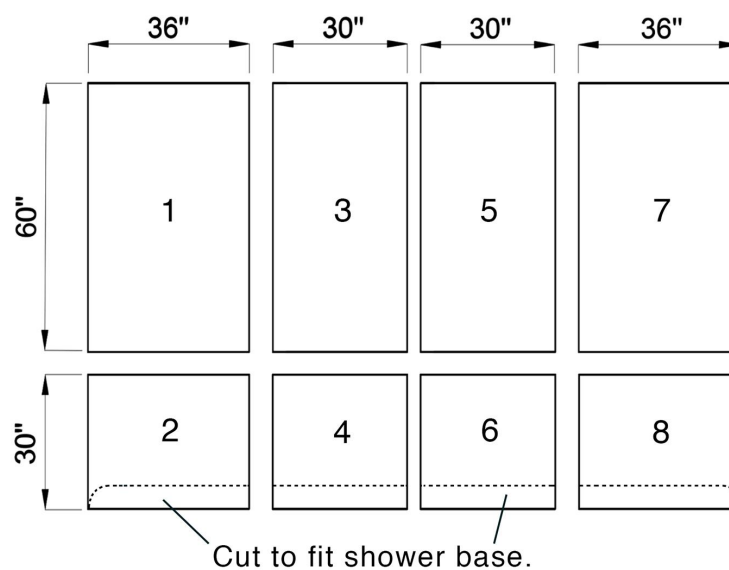

Side view of shower wall and base.

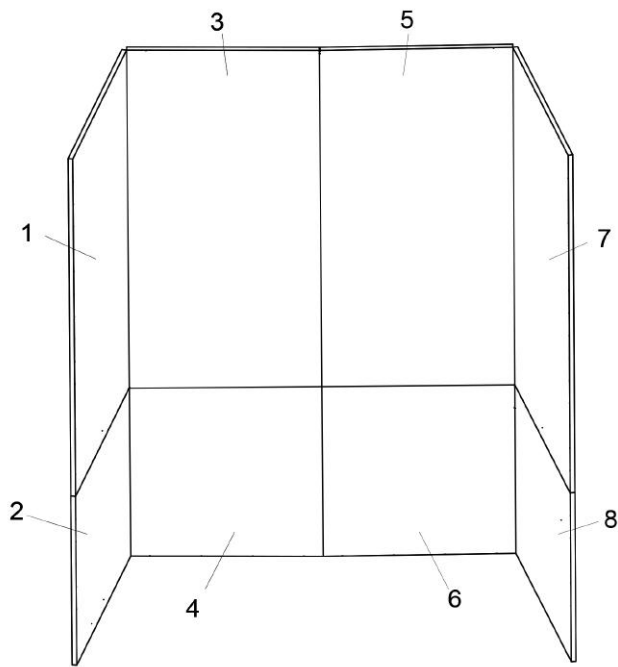


After the shower base is installed please follow the correct sequence of panel installation by referring to its respective drawing.

### 8 Piece

4 & 6, 3 & 5, 2 & 8, 1 & 7


### 6 Piece

2 & 6, 3 & 4, 1 & 5

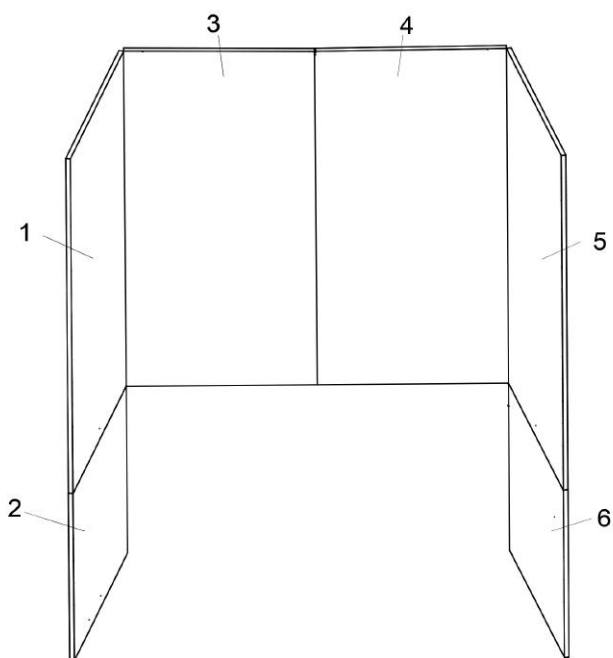

### 4 Piece

2 & 3, 1 & 4

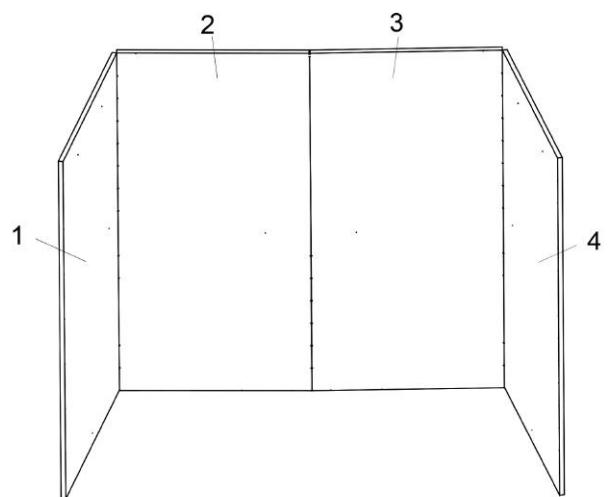

## Materials/Tools Required

### Blade example

1. Circular Saw with a masonry/diamond blade
2. Hole saw or jig saw to cut holes for plumbing fixtures with drill
3. Saw horses
4. 2x4s for saw horses and bracing
5. Sandpaper (recommend using 80 grit) for sanding cut edges
6. Tape measure
7. Pencil
8. 24" level
9. Acetone
10. Dry rag
11. Hole saw or jig saw to cut holes for plumbing fixtures
12. 100% Silicone must be used for panel installation
13. Latex caulk for panel to drywall seams




### Silicone example



Bracing example:

Each panel must be braced for the 100% silicone to entirely cure. Please follow purchased silicone manufacturers directions.

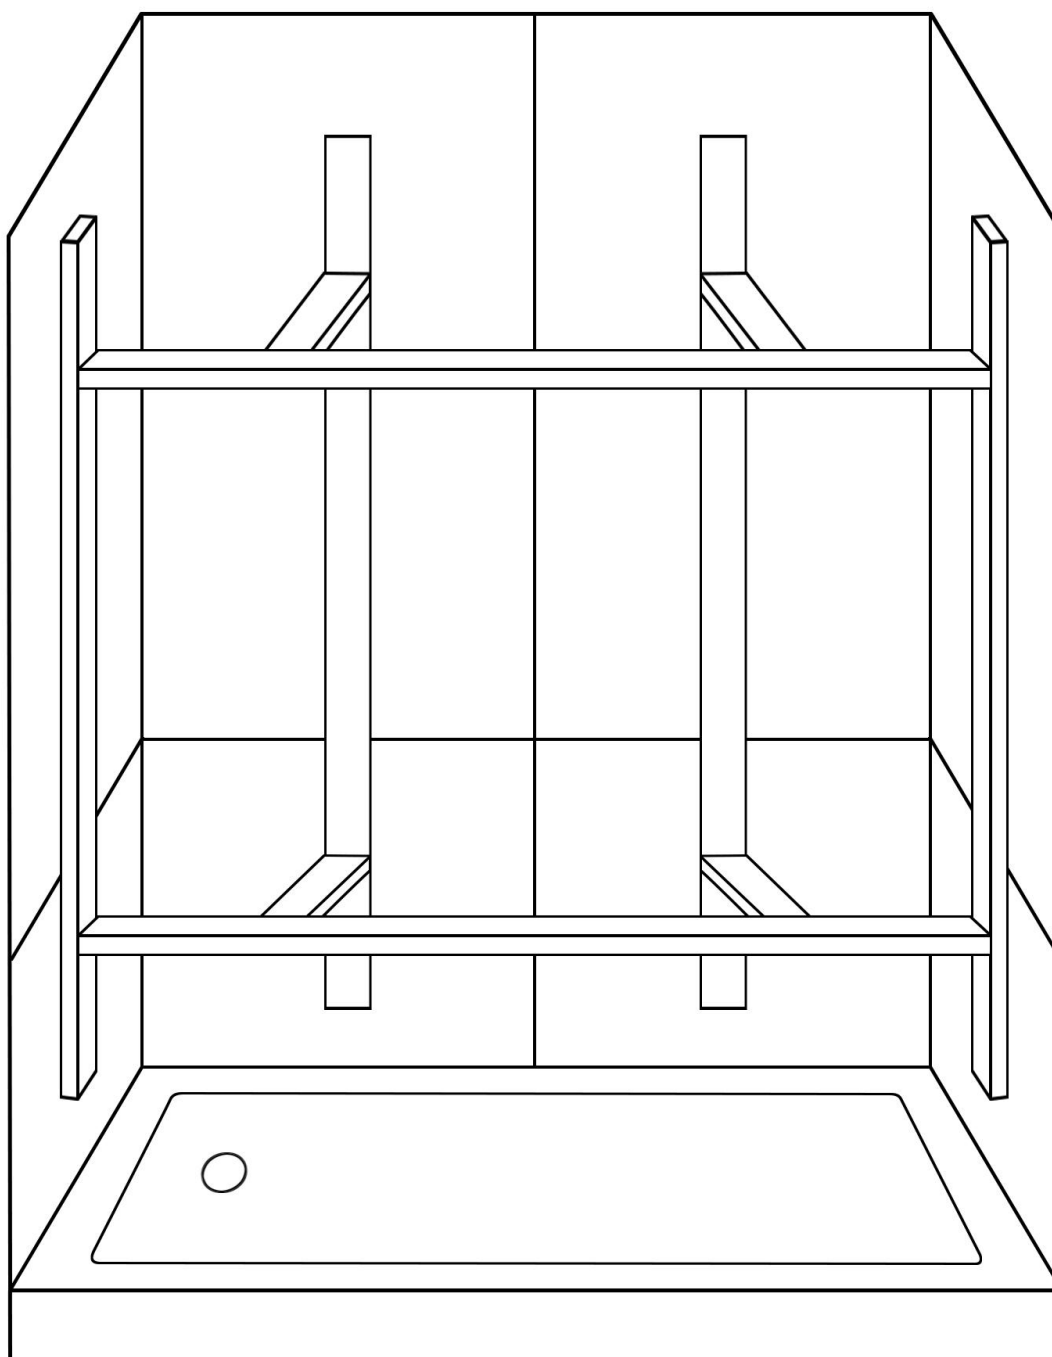



Please see the below installation ideas for adding decorative or mosaic tile (marked A in drawings). Decorative tiles (not included) can be purchased by the customer and installed in between shower wall panels as a decorative accent strip or if the joint lines of panels do not meet customer's expectations. The wall panels do not have rounded off edges, so it is suggested to add mosaic or decorative tile strip (optional). By adding decorative tile between the panels can also be used to increase the size of the walls. For example, 6" mosaic tiles can be added between the 30" and 60" panels to achieve an 8' high shower wall. The  $\frac{3}{4}$ " thick 2" trim also can be used as a separation piece between 2 panels and can be purchased separately if not initially included in your package.

