

Actual Size: 29.53" W × 59.84" L × 38" H
(75cm W × 152cm L × 96.5cm H)

Seat Width: 21" (53.3cm)

Seat Length: 20.1" (51cm)

Shipping Size: 32.68" W × 61.81" L × 47.64" H
(83cm W × 157cm L × 121cm H)

Shipping Weight: 359lbs · (163kg)

Net Weight: 238lbs · (108kg)

Unoccupied Water Capacity: 106gal · (401.4L)

Occupied Water Capacity: 70-90gal · (265 - 340L)



Product Features

Jetting System

1. Hydro Massage System
 - Hydro Massage Pump 8.1AMP 900W
 - Hydro massage intensity dial air control
 - In-line water heater 6AMP 650W
 - 18 jets
 - Push control
 - Switch between foot and leg massage only, back massage only or both by the diverter switches

H2 & Microbubbles System

- 1 HP Pump 10A
- Pressure Vessel
- On/Off push Control
- Agitator Valve
- The hydrogen concentration in the liquid can reach 1500PPB (after 5 minutes))

Included Features

1. Acrylic Tub Shell
 - Gloss White Finish
 - Fiberglass Gelcoat Reinforced
2. Stainless Steel Frame with Adjustable Leveling Legs
3. Inward swing acrylic S-Shape door
4. Two (2) front and one (1) end reversible, removable access panel
5. Stainless steel chrome finish U-shape deck & wall mount garb bar
6. Stainless Steel Brushed Finish Towel Bar

Faucet

Five-Piece Fast Fill Faucet Set

- Up to 18 GPM @ 60 PSI at ideal in home plumbing conditions
- Two (2) 5" Supply lines with 3/4" connectors
- Pull out, hand held, chrome plated hand shower with 5 ft. retractable stainless steel braided hose

Floor Drains

One (1) 2" PVC Drain and one (1) overflow and emergency Pull chain

Optional Features



Heated Seat and Backrest 4AMP


Electrical Requirements:

One (1) dedicated 110/120V 60Hz electrical line with a 20AMP/120V GFCI standard three prong outlet is required

Warranty

- Lifetime limited* warranty on shell, frame, door and parts to original purchaser
- Labor or installation is not covered – please refer to Ella warranty certificate
- Non-Ella brand faucets covered under manufacturers original warranty

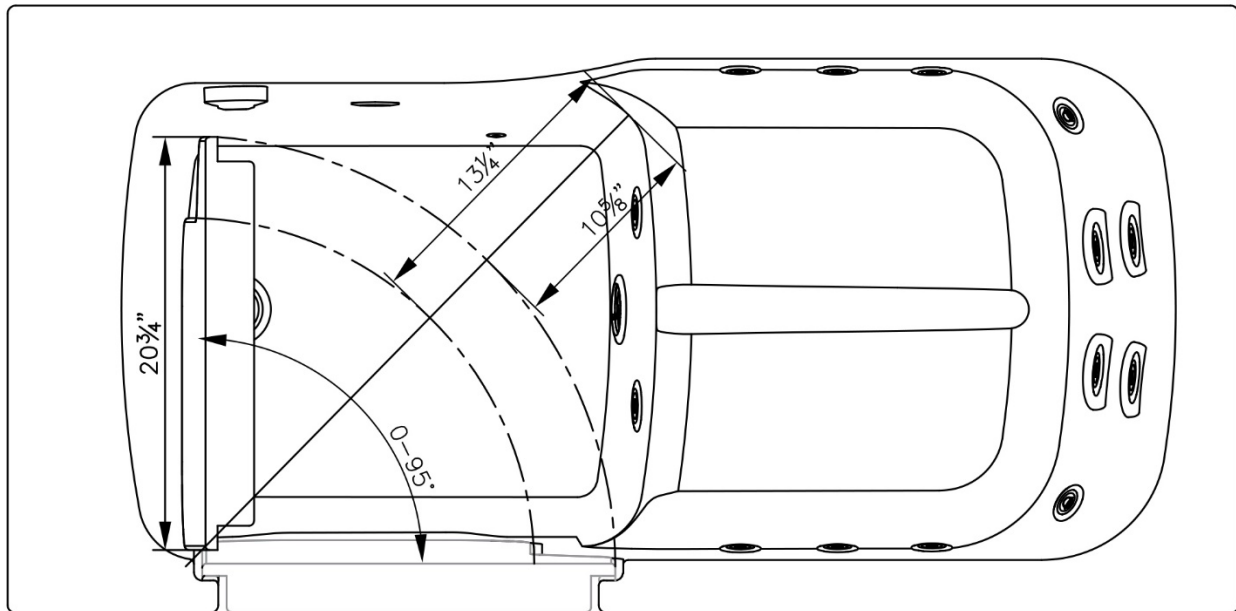
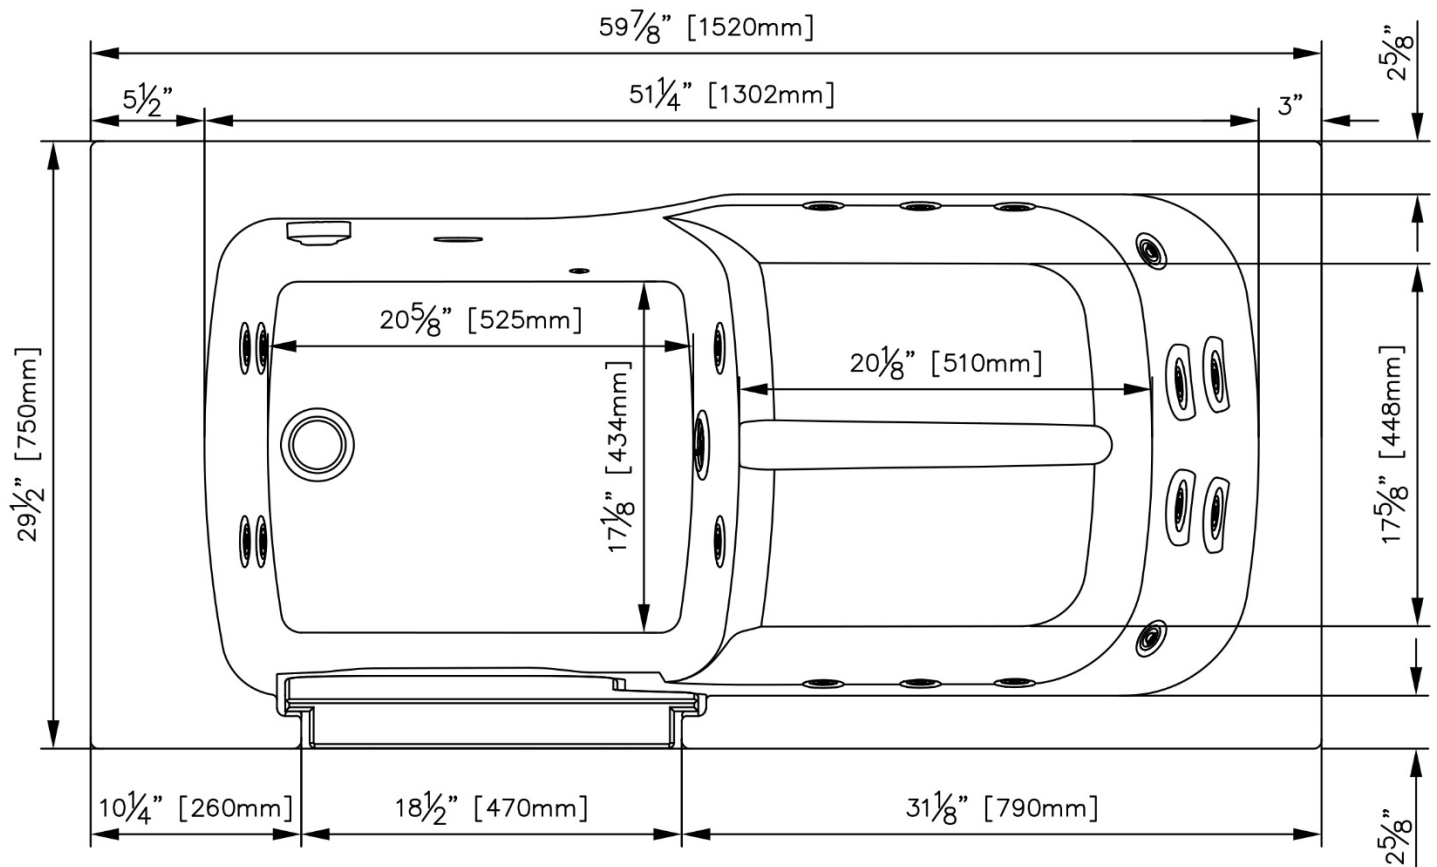


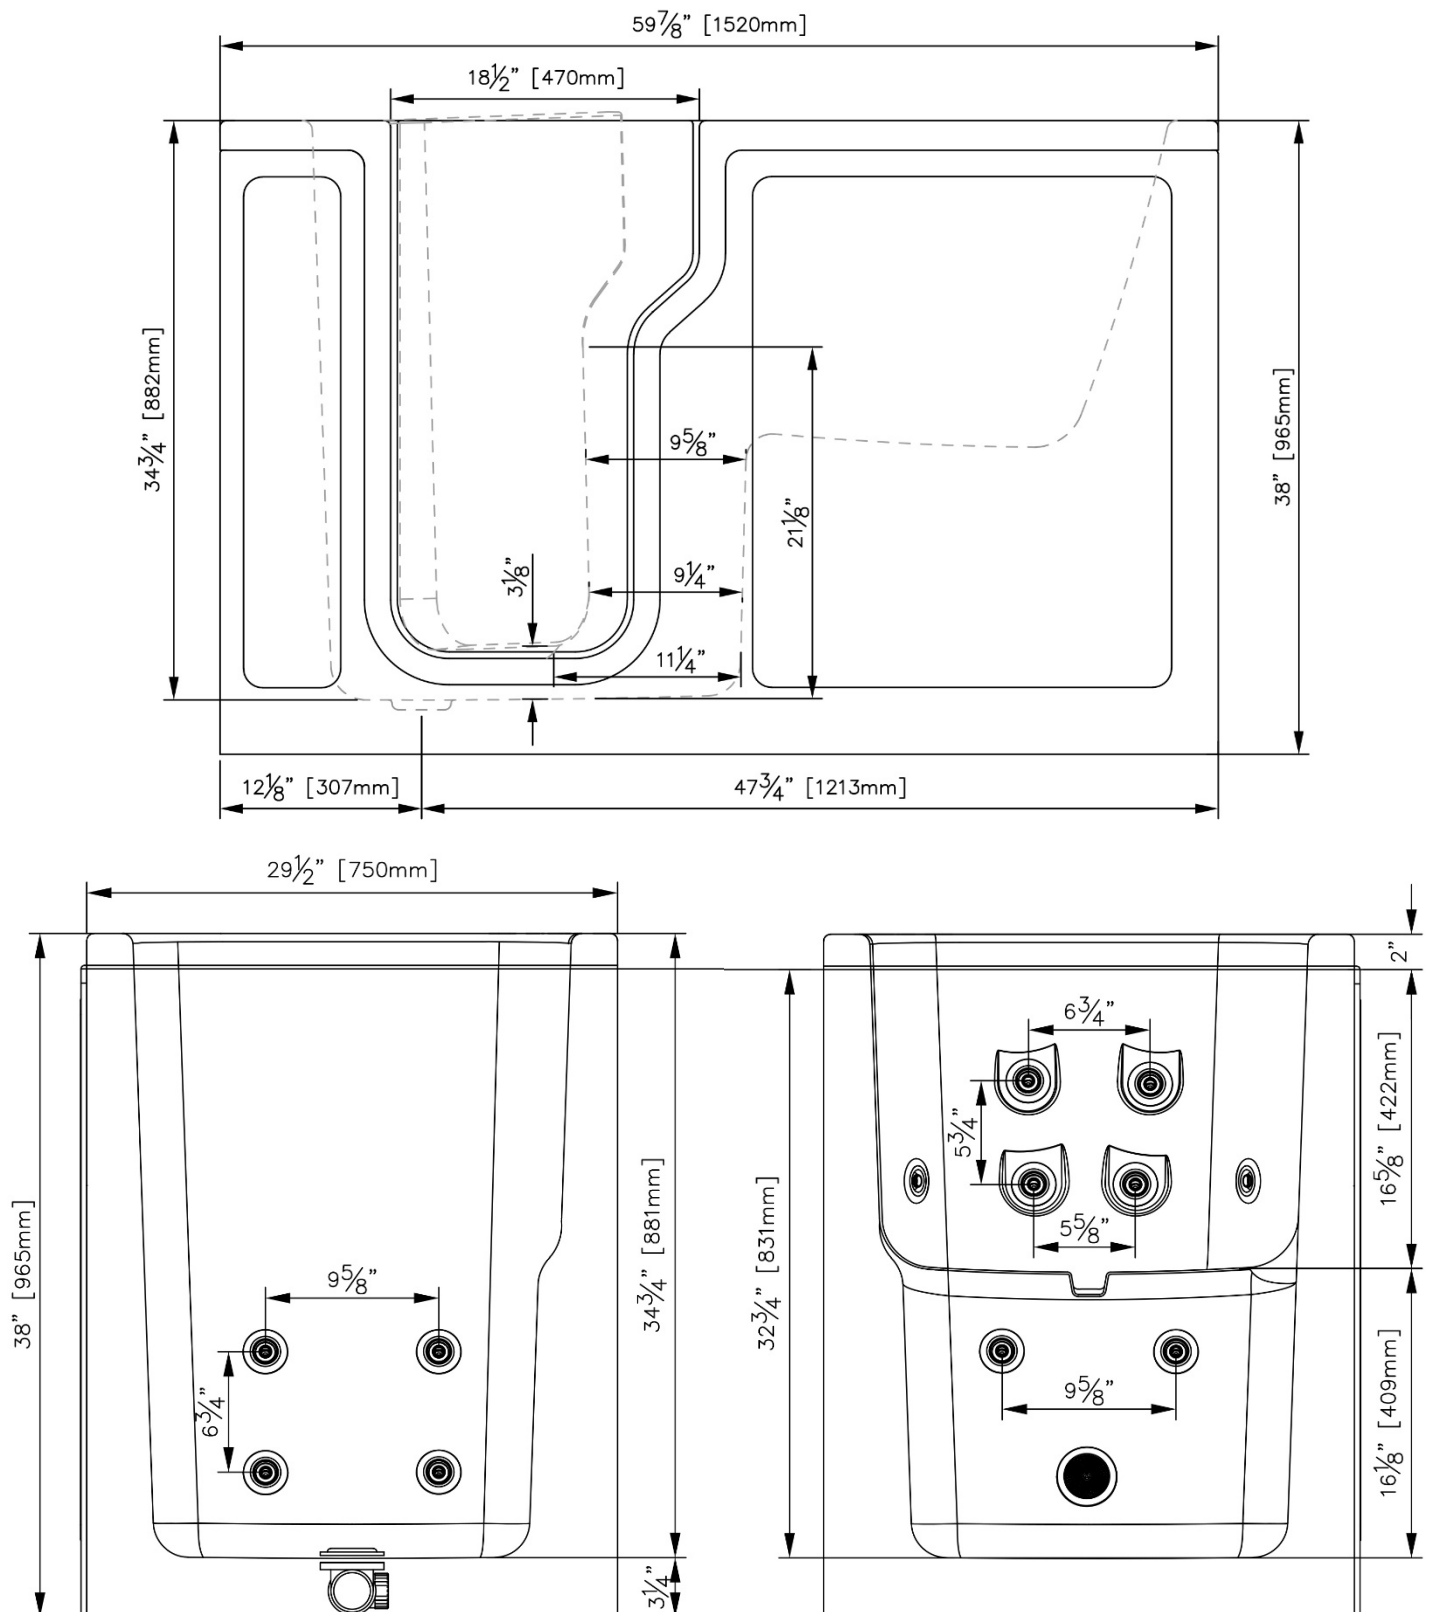



Cut the Ties and remove the container from under the tub

Remove the hose inside the tank and use it to connect to front of tub as shown below

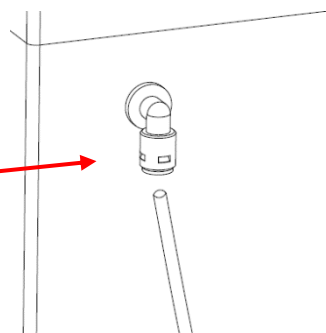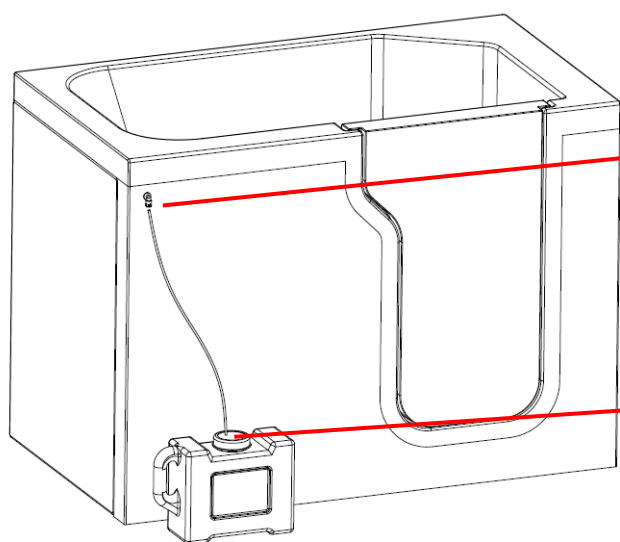

Fill the blue tank with distilled water.